


# INSTRUCTIONS


## ELECTRONIC DECORATOR TIME SWITCH

### INSTALLATION

*NOTE: INSTALLATION BY A LICENSED ELECTRICIAN IS RECOMMENDED. INSTALLATION AND USE OF THIS EQUIPMENT SHOULD BE IN ACCORDANCE WITH PROVISIONS OF THE U.S. NATIONAL ELECTRICAL CODE, APPLICABLE LOCAL CODES, AND PERTINENT INDUSTRY STANDARDS.*

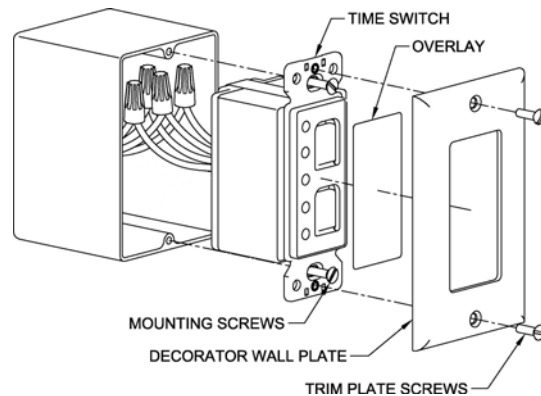

**Installation Diagram**

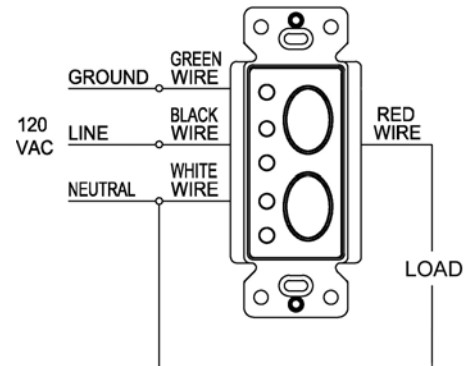

**Wiring Diagram**

- 1) **TURN POWER OFF at circuit breaker or fuse panel.**
- 2) Remove wall plate and existing switch from the wall box if one is presently installed.
- 3) Select white or ivory overlay matching decorator style wall plate to be used. Peel protective backing, and apply overlay to front, rectangular recess of time switch. *Be sure to align pushbutton and LED locations of overlay to time switch.*
- 4) Referring to Wiring Diagram, connect the wires from the electronic time switch to the wires in the wall box using the wire nuts provided.
- 5) Carefully place wires and switch into wall box, and secure with two mounting screws provided.
- 6) Install decorator style wall plate (not included).
- 7) **Turn power ON at circuit breaker or fuse panel.**

### OPERATION

- The "POWER" LED is always lighted either red to indicate the device is OFF or green to indicate the device is ON.
- Press the bottom "TIME RANGE SELECTOR" button to cycle through the available time delays. A lighted green LED indicates the current selection.
- Press the top "POWER" button to energize the device for the selected time delay. The "POWER" LED shall change from red to green. Once the time delay has expired, the device will automatically turn OFF and the "POWER" LED will change back to red.
- To turn the device OFF before the time delay is finished, press the "POWER" button.

